

FITTING INSTRUCTIONS FIT989


PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

BONNET GUARD TOYOTA HILUX / FORTUNER

BG580D

MADE IN NEW ZEALAND

1. OPEN BONNET OF VEHICLE.
2. POSITION BONNET GUARD CENTRALLY ON THE BONNET OF VEHICLE.
3. THE HOLES OF THE BONNET GUARD ALIGN WITH FACTORY PRE-DRILLED HOLES UNDERSIDE OF BONNET.
4. RE-POSITION THE BONNET GUARD AND ATTACH WITH THE PUSH PINS AND WASHERS PROVIDED. INSTALLATION SEQUENCE SHOULD BE AS PER DIAGRAM BELOW

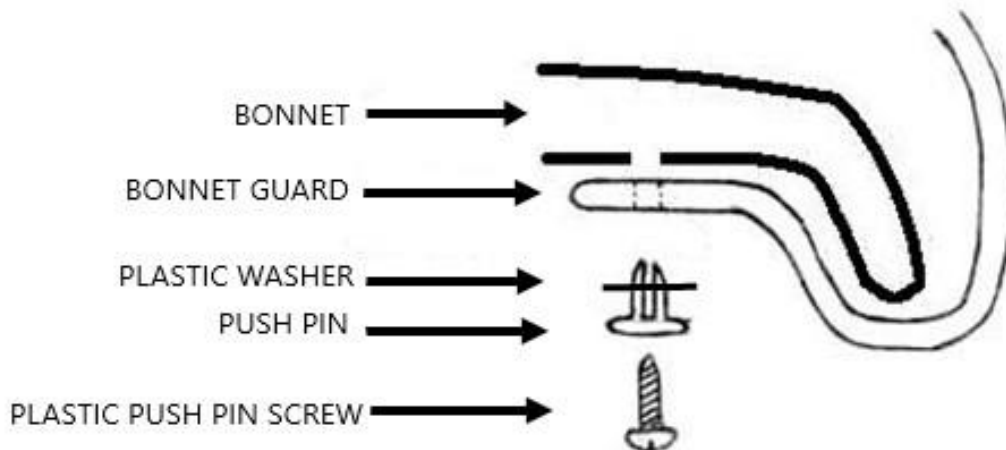

*CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.
NEVER PRESS ON THE BONNET GUARD.*

Wash acrylic with a mild soap and lukewarm water solution, using a clean, soft cloth or sponge.