

## FITTING INSTRUCTIONS FIT1179



PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

# BYD ATTO3

# BG644D

MADE IN NEW ZEALAND

1. Clean and open bonnet.
2. Trial fit the Bonnet Guard and note the 2 pre-drilled holes in the Bonnet Guard that correspond with the holes in the underside of bonnet.
3. Fit Bonnet Guard in position and fasten securely with supplied plastic "push pins". Note sequence as per diagram & images as below.

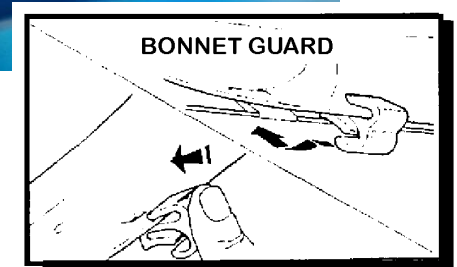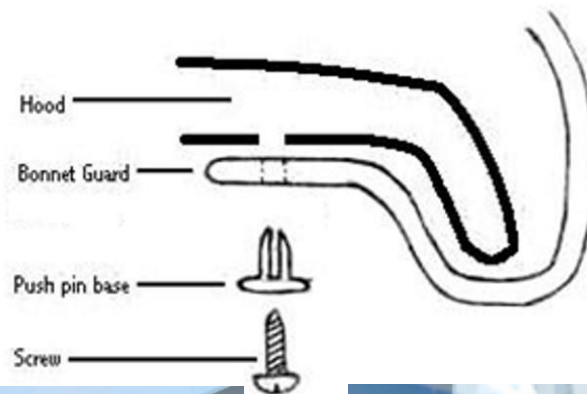

4. Apply the anti-abrasive tape on edge of bonnet where plastic fastening clip secures the Bonnet Guard near the fenders. Use the supplied alcohol prep-pads to cleanse the area first.
5. Snap 2 supplied plastic "W" clip into hole position on Bonnet Guard as shown, over the anti-abrasive tape.

Wash acrylic with a mild soap and lukewarm water solution, using a clean, soft cloth or sponge.  
No authorisation by or association with any automobile manufacturer is implied.

**CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.  
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.  
NEVER PRESS ON THE BONNET GUARD**