

## FITTING INSTRUCTIONS FIT1207


PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

### BONNET GUARD FIAT DUCATO 2015+


### BG585D

MADE IN NEW ZEALAND

1. Clean and open bonnet.
2. Fit Bonnet Guard in position, easing the bonnet guard tabs between the rubber weather-strip and the bonnet. –being careful not to pull on the rubber weather-strip too hard.

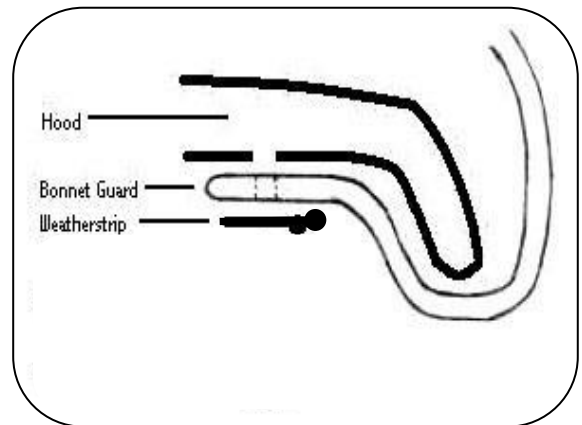

3. Fit the plastic “W” clips to the holes at the outer edge of the Bonnet Guard. Apply the supplied rectangular pieces of anti-abrasive tape on edge of bonnet where plastic fastening “W” clips secure the Bonnet Guard. Use the supplied alcohol prep-pads to cleanse the area first.

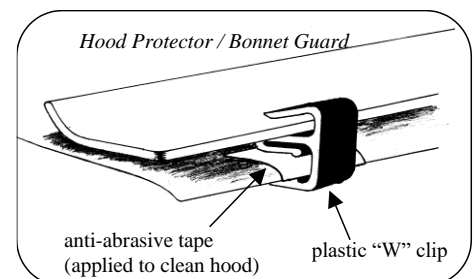

***CLOSE THE HOOD BY DROPPING FROM 6" HEIGHT.  
ASSIST CLOSURE ONLY BY PRESSING ON THE HOOD.  
NEVER PRESS ON THE HOOD PROTECTOR.***

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.  
No authorization by or association with any automobile manufacturer is implied.