



MONTERINGSANVISNING
EXTRA BACKLJUS



MOUNTING DESCRIPTION
ADDITIONAL REVERSING LIGHTS




MONTAGEANLEITUNG
ZUSÄTZLICHE RÜCKFAHRSCHEINWERFER



Make	Model	Year	Article Code
Citroën	Jumpy	2016-	1540-830
Opel	Vivaro	2020-	
Peugeot	Expert	2016-	
Toyota	Proace	2016-	




30 min

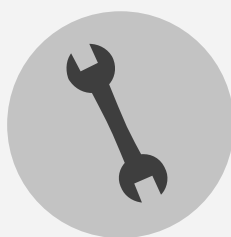

13

Nr	Andring	Datum	Godk.
A		2020-03-31	

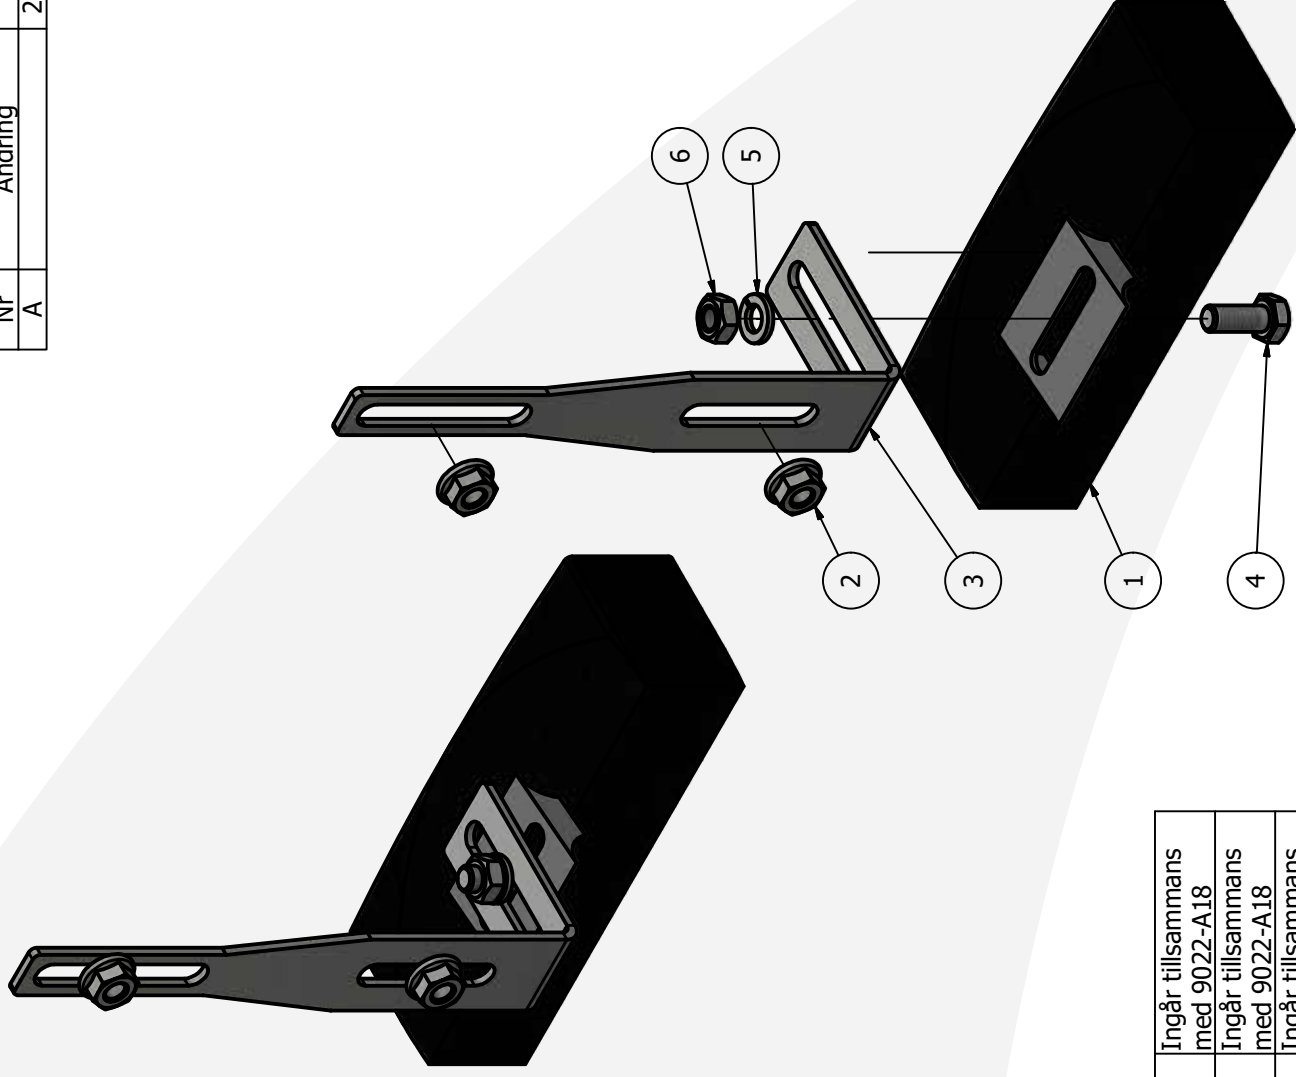

6	2	Mutter - Rostfritt stål - M8	Rostfritt stål	Ingår tillsammans med 9022-A18
5	2	Låsbricka - Rostfritt stål - M8	Rostfritt stål	Ingår tillsammans med 9022-A18
4	2	Bult - Rostfritt stål - M8x20	Rostfritt stål	Ingår tillsammans med 9022-A18
3	2	Fäste backkjus - 9022-A18	Rostfritt stål	930-33030
2	4	Flänsmutter - Rostfritt stål - M8	Rostfritt stål	931-5056808000
1	2	Arbetsbelysning SLIM 18W	Rostfritt stål	9022-A18
Pos	Ant	Beskrivning	Material	Artikelnummer

Konstruktör	Ritad av	Skala	Essätter	Essätt av
MH	MH			
AB Maho		TRANSPORT		
Tel: +46(0)500 22 14 80		S T Y L I N G		
email: info@mahock.se		ART.NR		
		2020-03-31		
		Assembly - 1540-830		





