




TRANSPORT
S T Y L I N G

2625-930/930B

MONTERINGSANVISNING

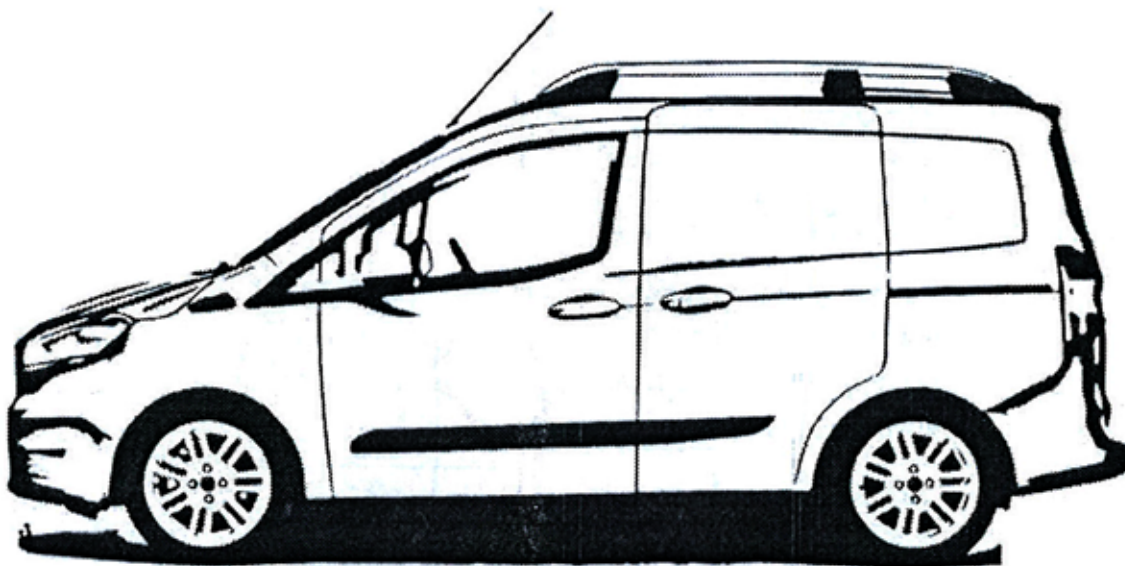

Fabrikat
Ford

Modell
Courier 2014-



Montagetid
30 minuter



x4



x4



x4



M6 x 40, x2
M6 x 70, x2



x6



x2

