



Mounting instructions: Sidebar series GM/BM/RM/RC/GC/BC

Ford Transit Custom 2013> Ford Transit 2014>




SW17 (46Nm)



SW13 (23Nm)



60 Min.

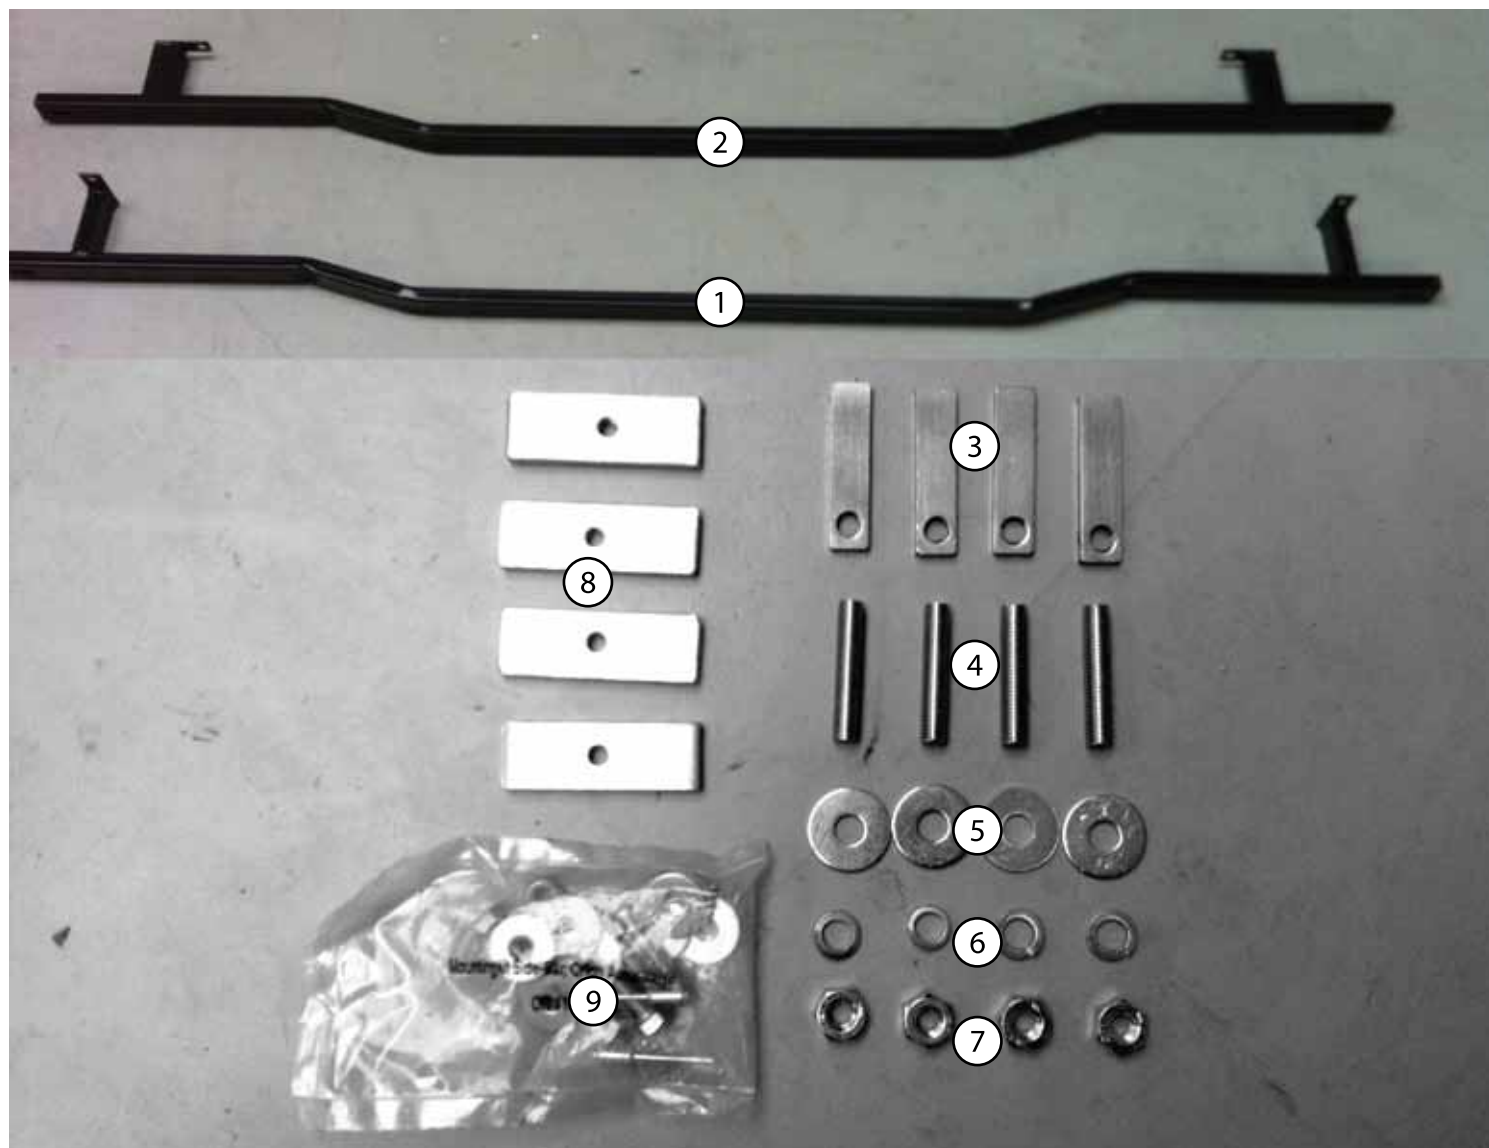

- 1 Front bracket
- 2 Rear bracket
- 3 Mounting plate M10
- 4 Stud M10
- 5 M10 Washer
- 6 M10 Spring washer
- 7 M10 Nut
- 8 Mounting plate M8 (sidebar to frame)
- 9 Mounting parts siderbar to frame

