

FITTING INSTRUCTIONS FIT1292

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

BONNET GUARD ISUZU DMAX 2024+


BG668D

MADE IN NEW ZEALAND

1. Open the Bonnet.
Clean and dry the area where the bonnet guard is to fit – both the top side and underneath.
2. Hold bonnet guard against bonnet and mark where the double-sided tape will stick. Apply adhesion primer to mark area to help the double-sided tape to adhere.
3. Peel approx. 40mm of the backing strip from the 3M double sided tape as per image below.



4. Place the Bonnet Guard into position on the Bonnet ensuring it is centrally located.
5. Firmly hold the bonnet guard in position to allow the 3M tape to bond, and peel the rest of the red back off.
6. Fit the plastic 4 x "W" clips to the holes at the outer edge of the Bonnet Guard and the edge of the bonnet in the following way:

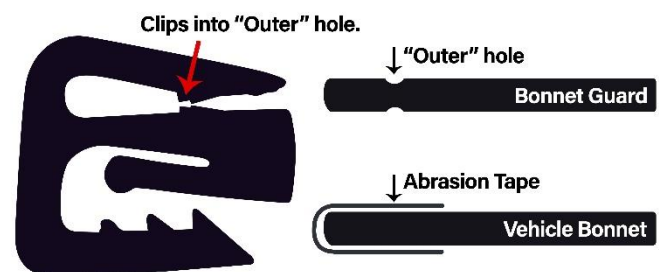



AUTOMOTIVE ACCESSORY
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand
PO Box 11286, Ellerslie, Auckland 1542 New Zealand
PH +64 (9) 276-9826 Fax +64 (9) 276-9836
info@airplex.co.nz www.airplex.co.nz

7. Take note where the lower part of the 'W' clip will attach to the bonnet. Use the supplied alcohol prep-pads to cleanse the area and let it thoroughly dry. Apply the supplied rectangular pieces of anti-abrasive tape on edge of bonnet where plastic fastening "W" clips secure the Bonnet Guard.
8. Firmly press the 'W' clip over the anti-abrasive tape to grip the bonnet and the bonnet guard. Ensure the top part of the clip aligns with the small locating hole in the bonnet guard.

*CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.
NEVER PRESS ON THE BONNET PROTECTOR.*