




ISUZU DMAX 2017+ P/N BG575


BONNET GUARD FITTING INSTRUCTIONS: PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION.

1. Clean and open bonnet.

2. Fit Bonnet Guard in position & fasten securely with supplied plastic "push pin" and screw.

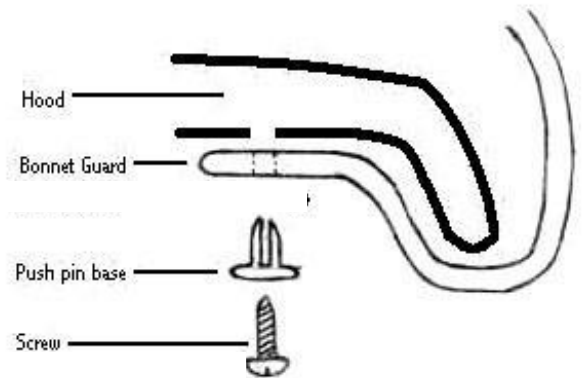

3. Fit the plastic "W" clips to the 4 holes at the outer edge of the Bonnet Guard. Apply the supplied rectangular pieces of anti-abrasive tape on edge of bonnet where plastic fastening "W" clips secure the Bonnet Guard. Use the supplied alcohol prep-pads to cleanse the area first.

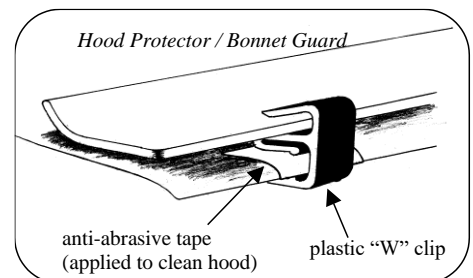

***CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.
NEVER PRESS ON THE BONNET GUARD.***

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.
No authorization by or association with any automobile manufacturer is implied.