

FITTING INSTRUCTIONS FIT1086


PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

KIA SORENTO 2021+


BG619D

MADE IN NEW ZEALAND

1. Clean and open bonnet.
2. Test Bonnet Guard on the bonnet and note the 4 holes in bonnet that correspond with 4 pre-drilled holes in Bonnet Guard.
3. Fit Bonnet Guard in position and fasten securely with supplied plastic "push pins".

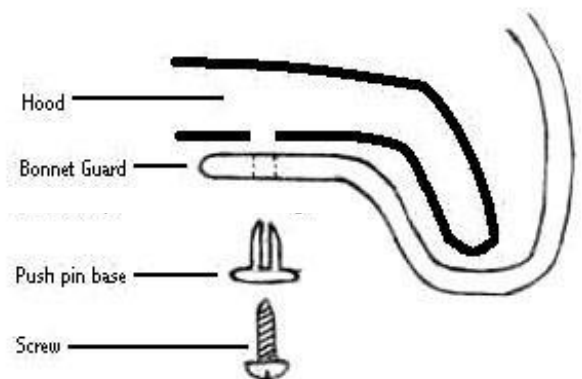

4. Fit the plastic "W" clips to the 2 holes at the outer edge of the Bonnet Guard. Apply the supplied rectangular pieces of anti-abrasive tape on edge of bonnet where plastic fastening "W" clips secure the Bonnet Guard. Use the supplied alcohol prep-pads to cleanse the area first.

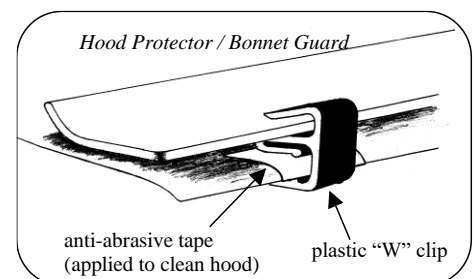

Some vehicles will have a "rubber weather-strip" attached to the underside of bonnet. If so, insert the bonnet guard between the bonnet and the weather-strip.

***CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.
NEVER PRESS ON THE BONNET PROTECTOR.***