
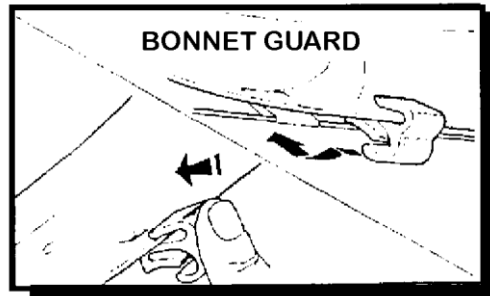


FITTING INSTRUCTIONS FIT937

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

MERCEDES SPRINTER 2014+

P/N BG553

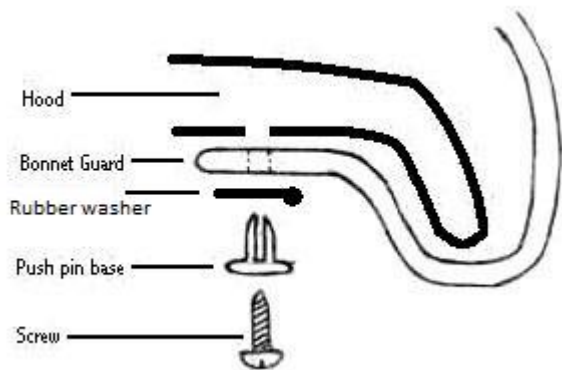

1. Clean and open bonnet.
2. Position the Bonnet Guard on the bonnet and note the 4 hole positions and remove the 4 plastic retaining clips
3. Insert the tabs of the Bonnet Guard between the rubber washer and the bonnet.
4. Fasten Bonnet Guard with 4 supplied push pin bases & plastic screws, first through the rubber washer, and then through the Bonnet Guard and into the hole in the bonnet.
5. Note: Hold the push-pin base when fixing Bonnet Guard to vehicle to ensure firmly tightened.
6. Stick the anti-abrasive tape on edge of bonnet where plastic fastening clip secures the Bonnet Guard near the fenders. Use the supplied alcohol prep-pads to cleanse the area first.
7. Snap plastic clip into hole position on Bonnet Guard as shown, over the anti-abrasive tape.

Bonnet adjustment: After fitment of Bonnet Guard, it is important to check if there is sufficient room between the bonnet and the grille. Close bonnet slowly to determine if room is sufficient. If doubtful, it is advisable to adjust the bonnet stops to allow more room.

***CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.
NEVER PRESS ON THE BONNET GUARD.***

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.
No authorization by or association with any automobile manufacturer is implied.