

# Mounting instructions

Side bar series: GM - GC- RM - RC - BM - BC

## Mercedes Vito/V-Class 2003+ and 2014+



SW17 (46 Nm)




45 Min.

Version: January 2018





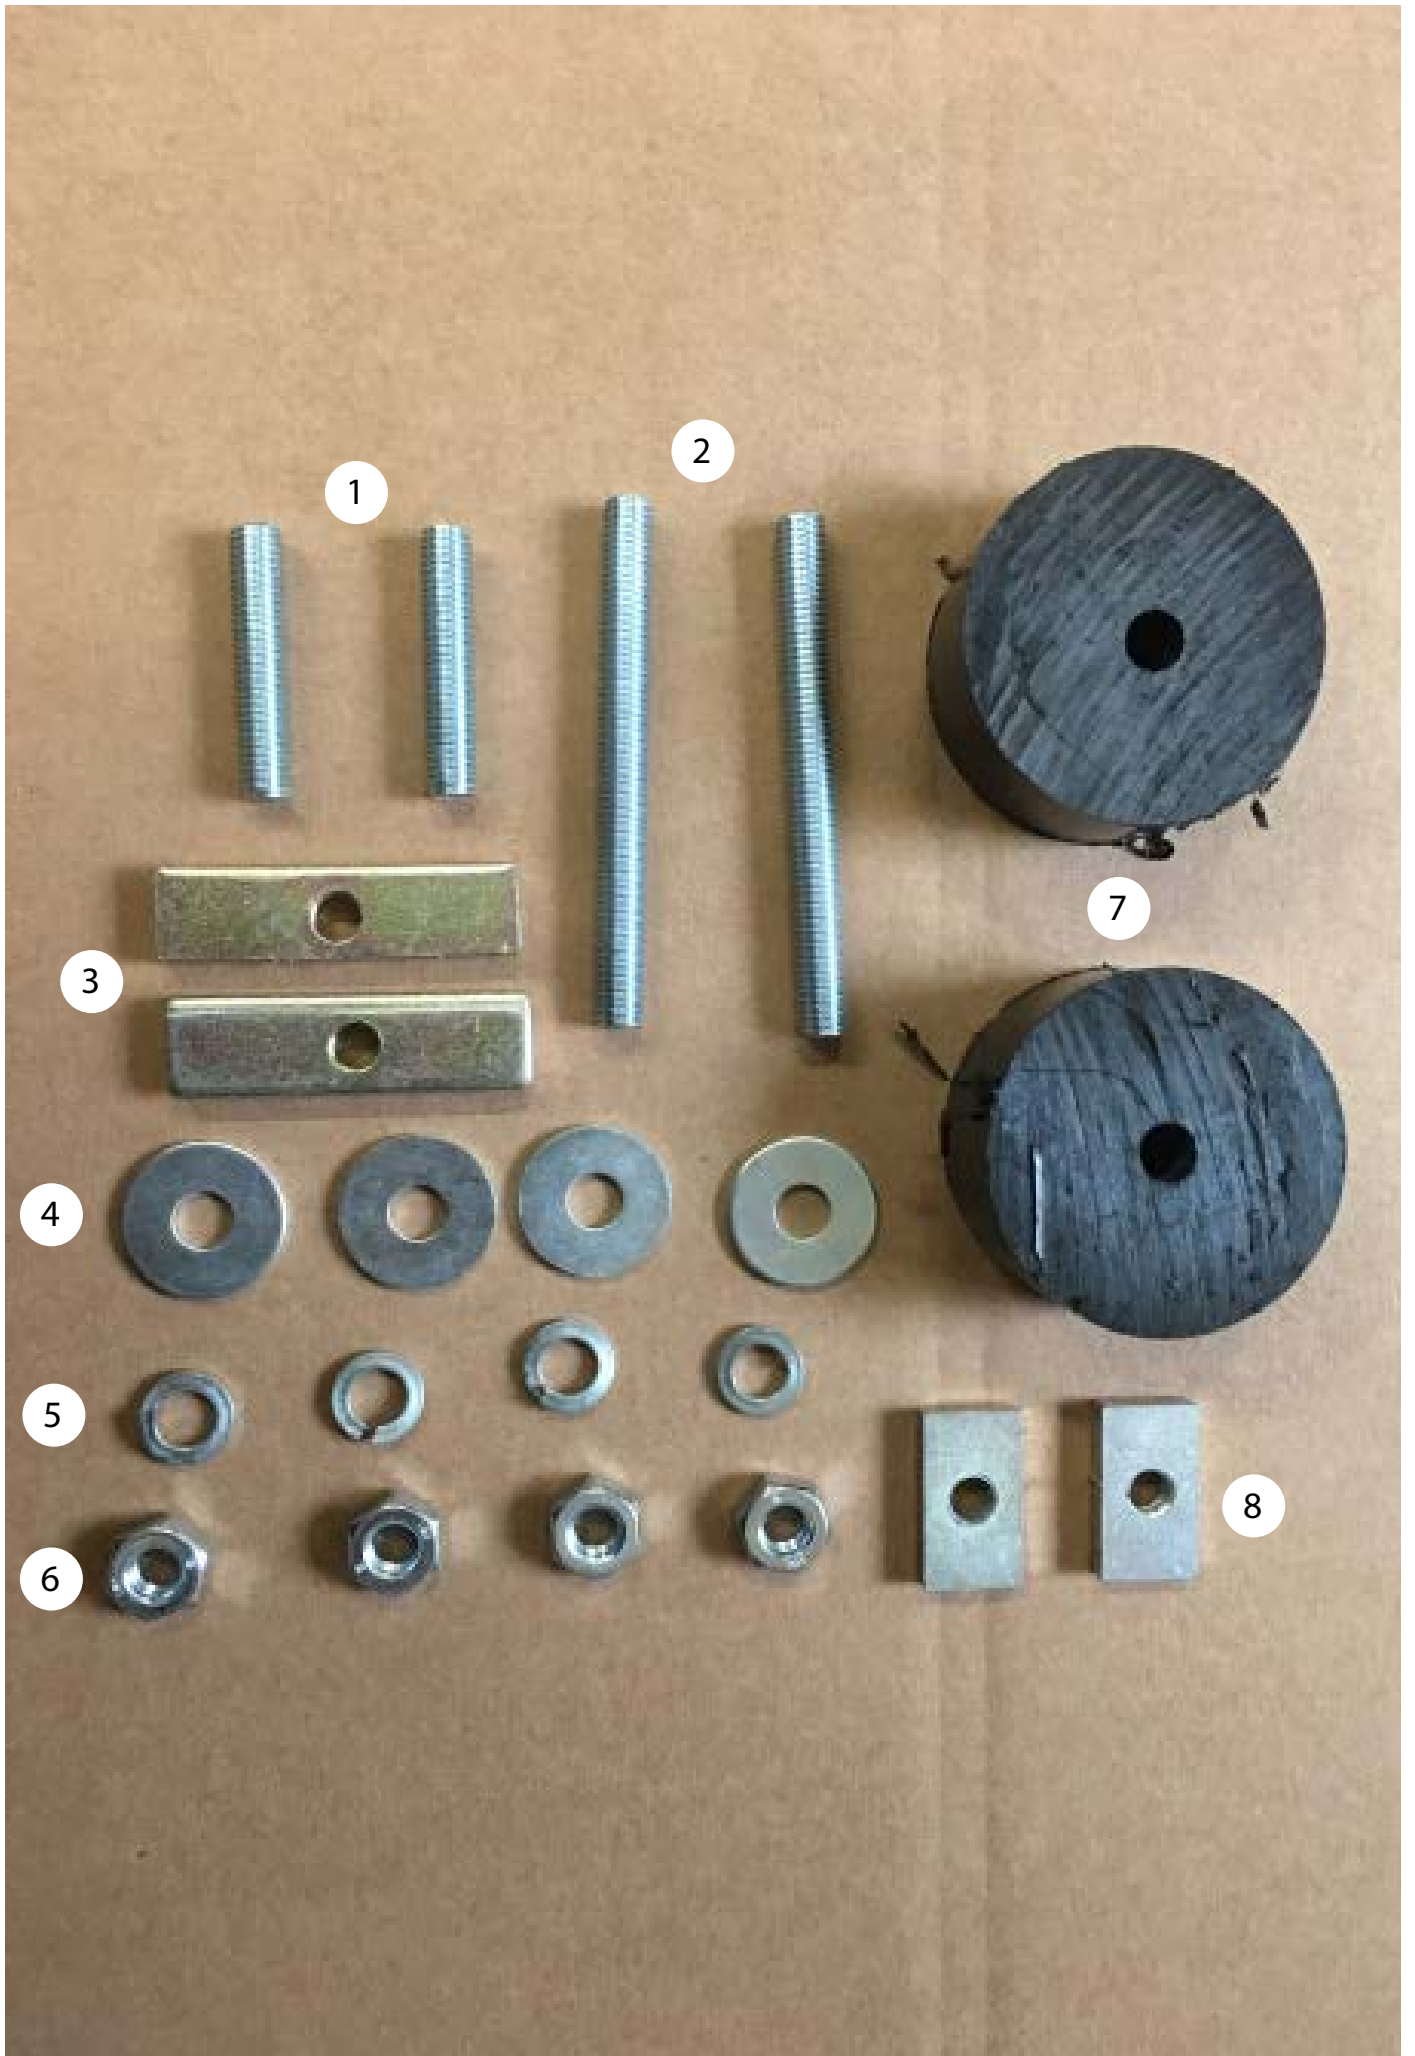

1

2

7









3







4

5

6

8

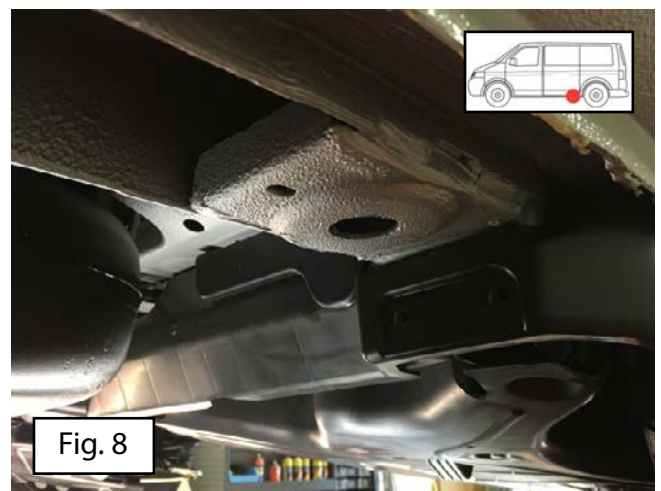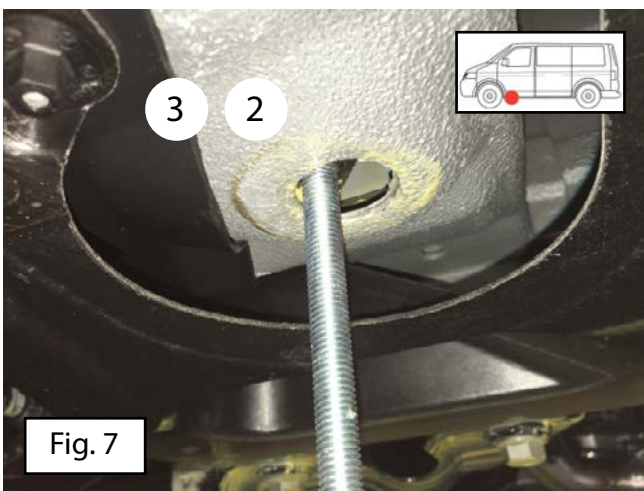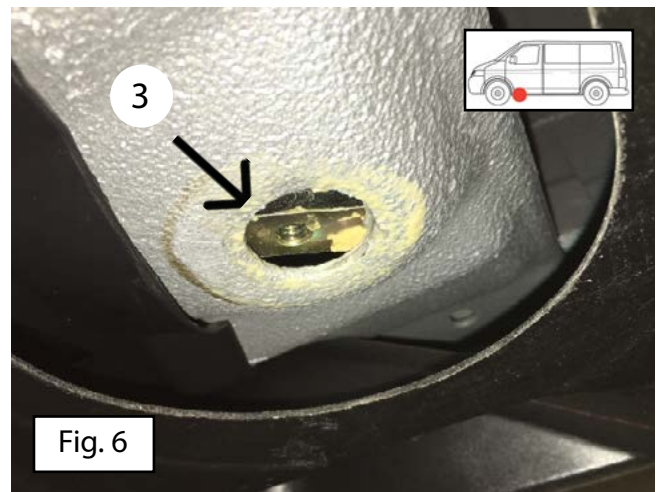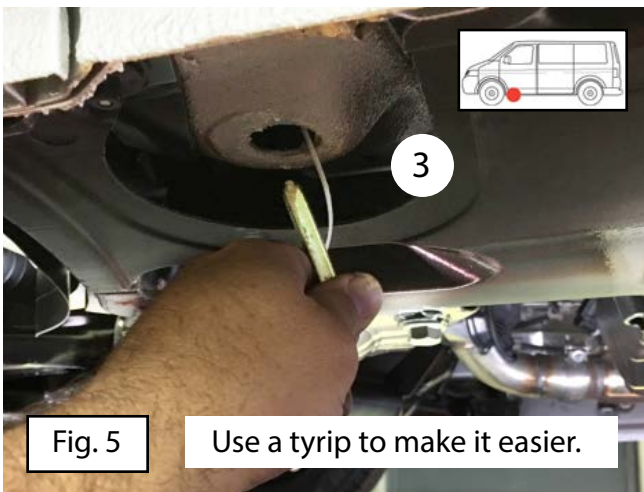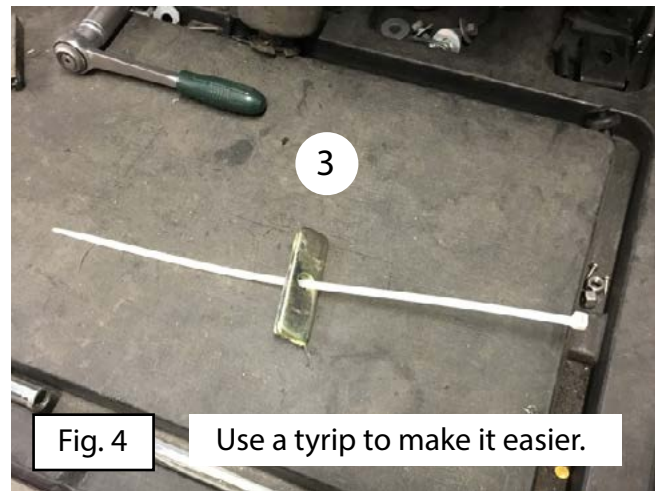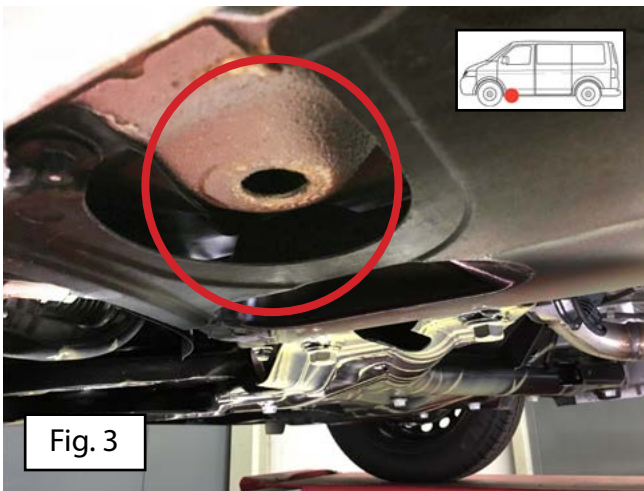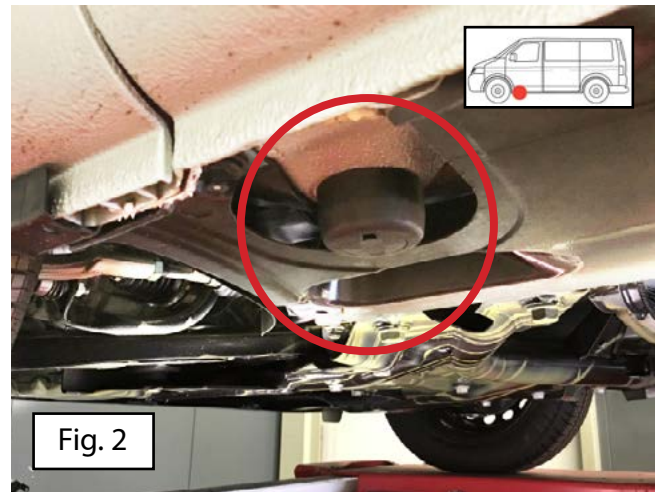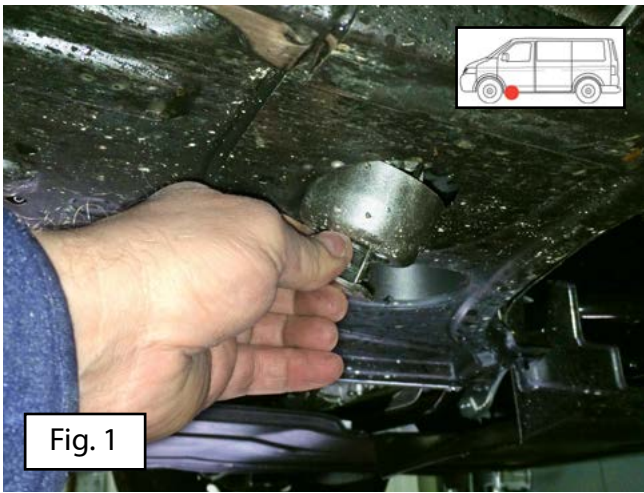

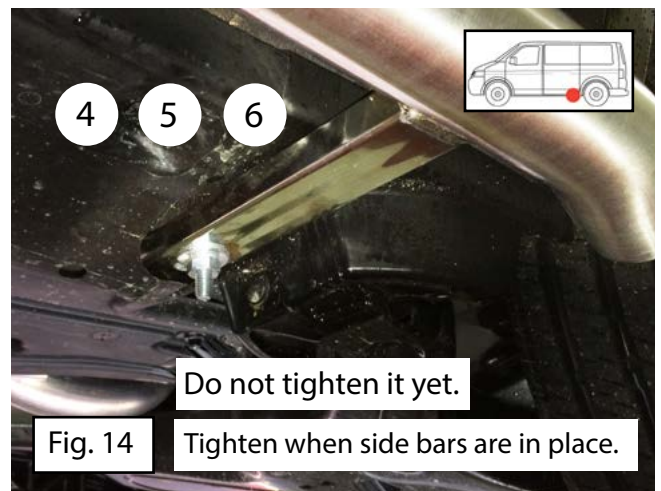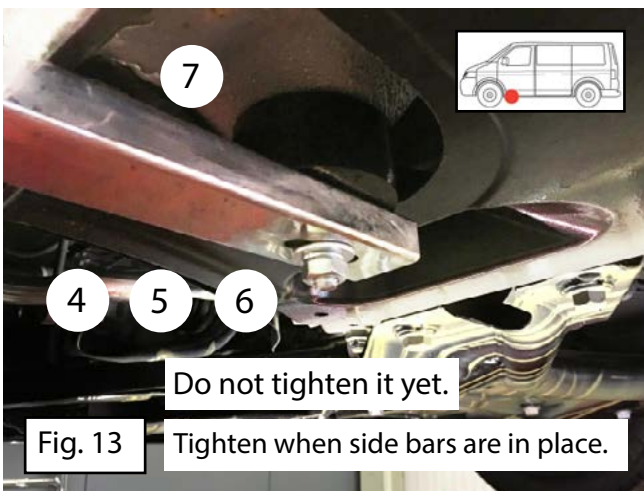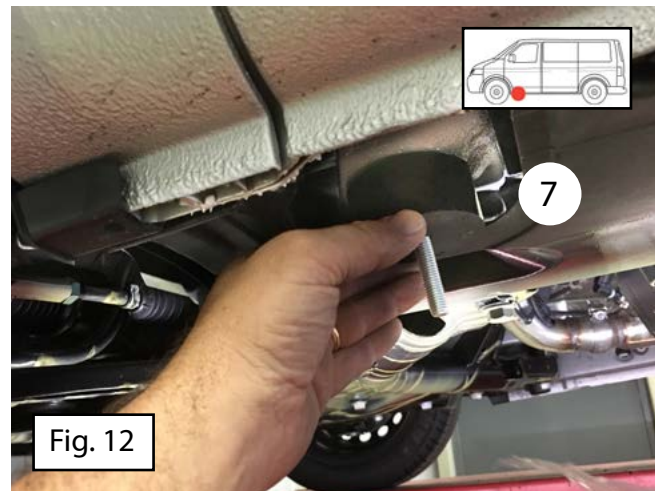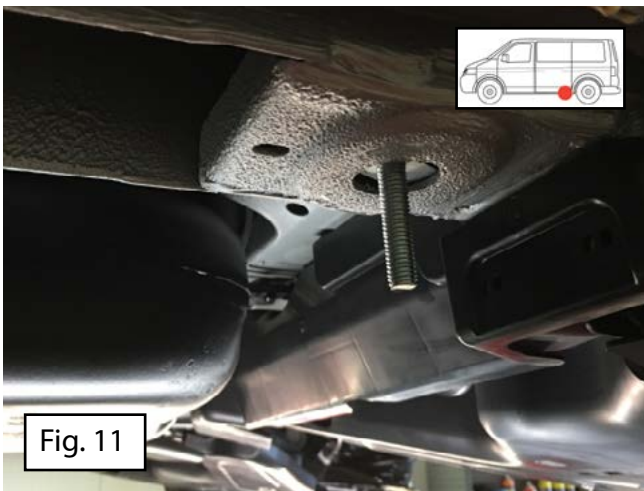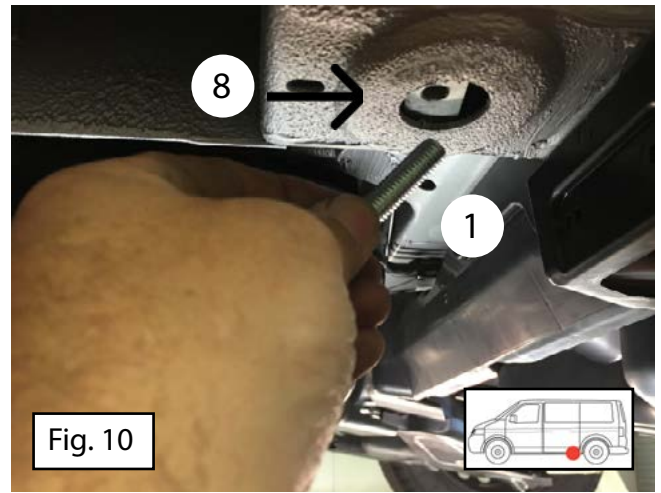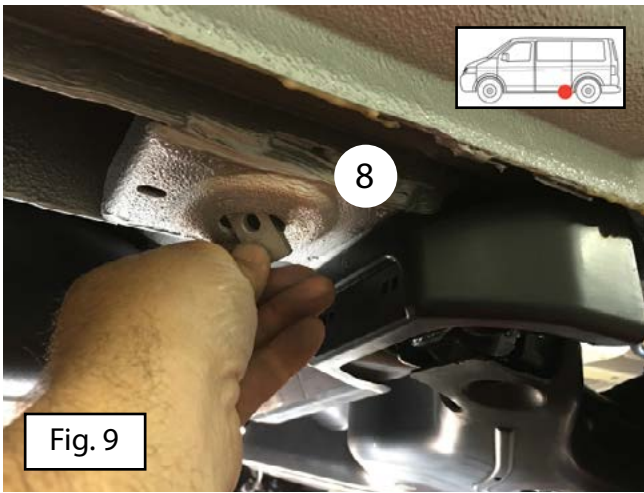

Repeat these steps for the right side.

# Matching accessories:

