

# 9046






# ClimAir®






car comfort

- D Einbauanleitung
- GB Installation instructions
- F Consignes de montage
- E Instrucciones de montaje
- RUS Инструкция по монтажу и установке



QR-Code - Einbaufilm Windabweiser  
QR-Code - Fitting film wind deflector

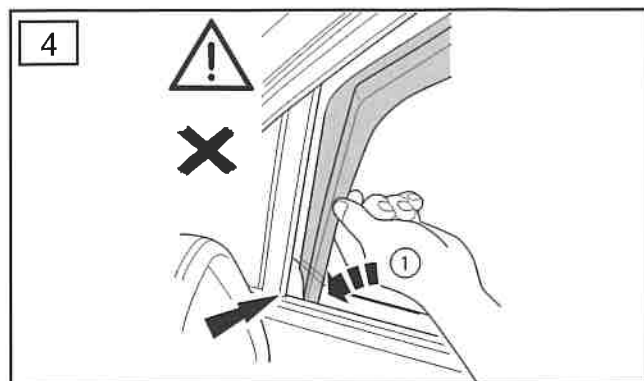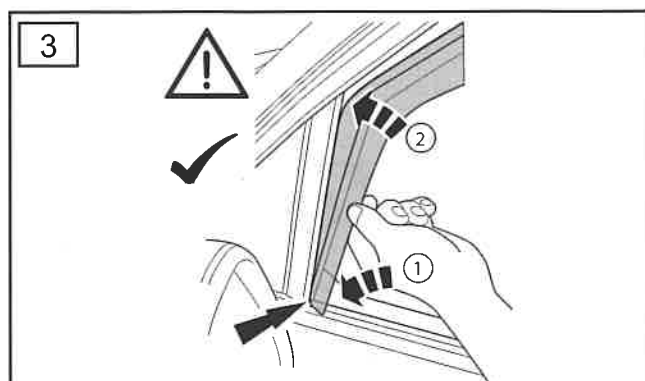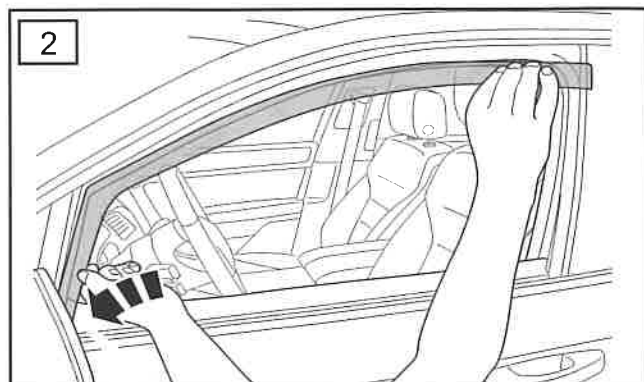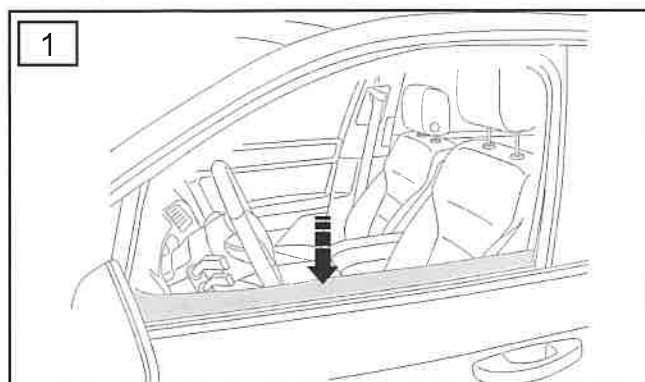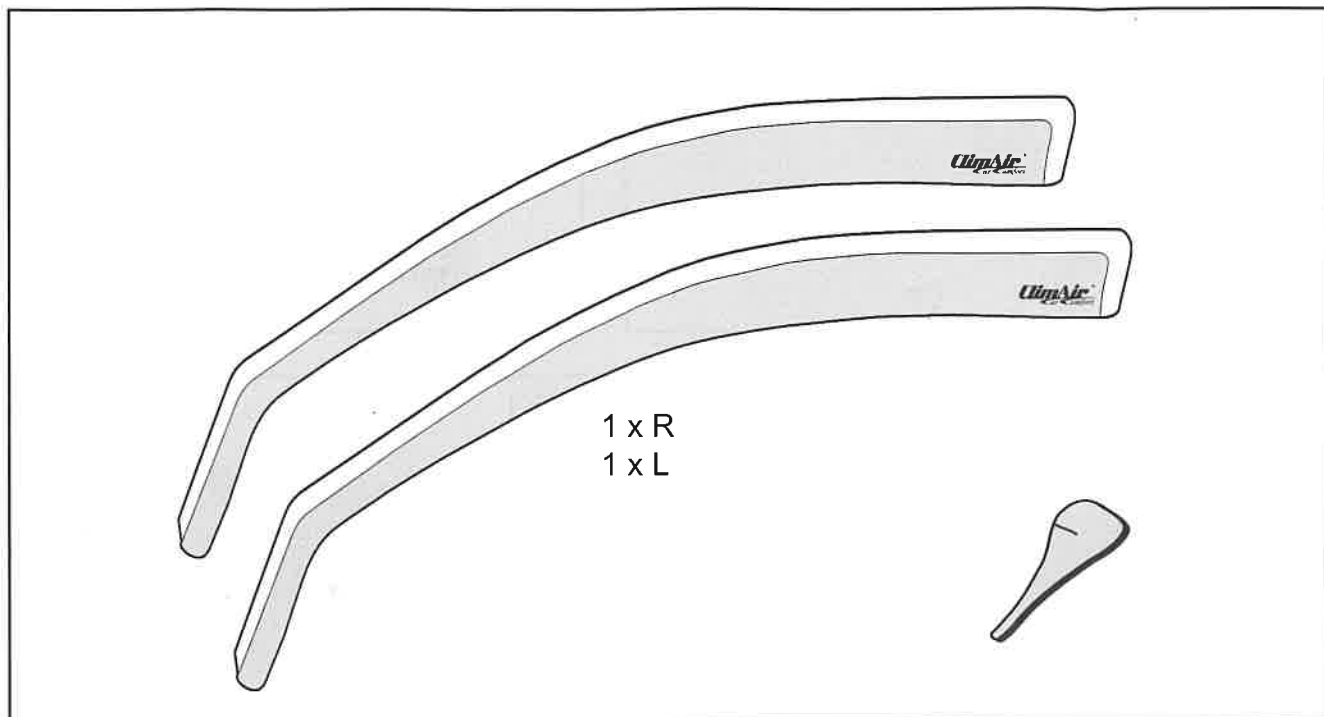

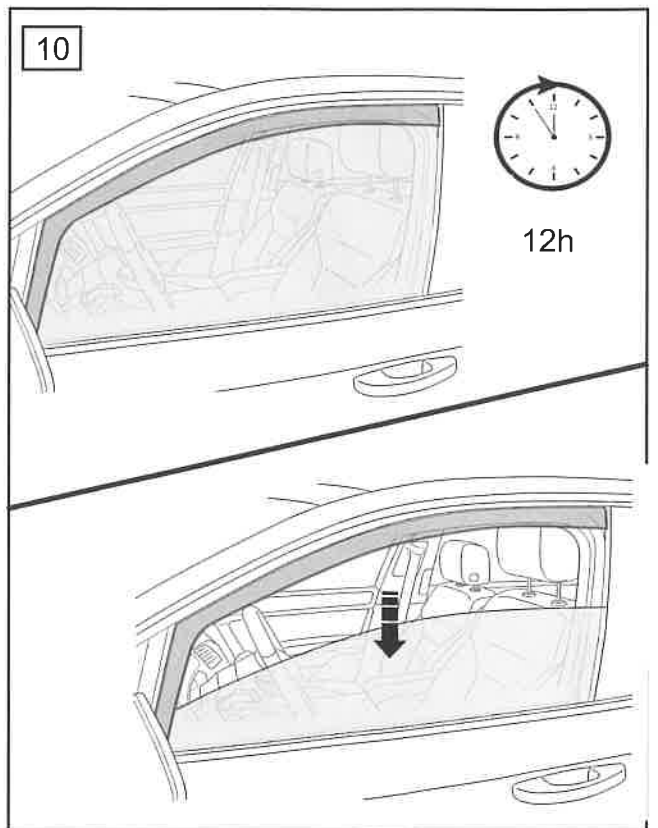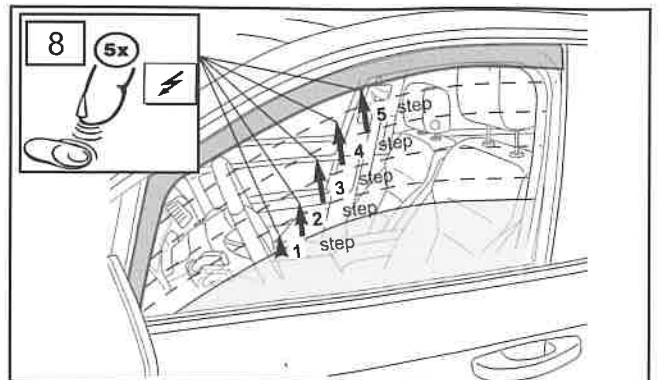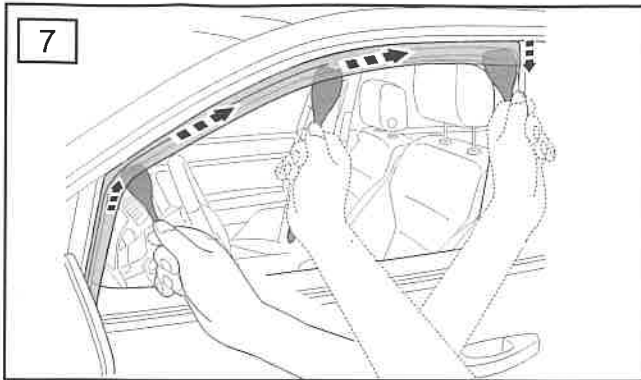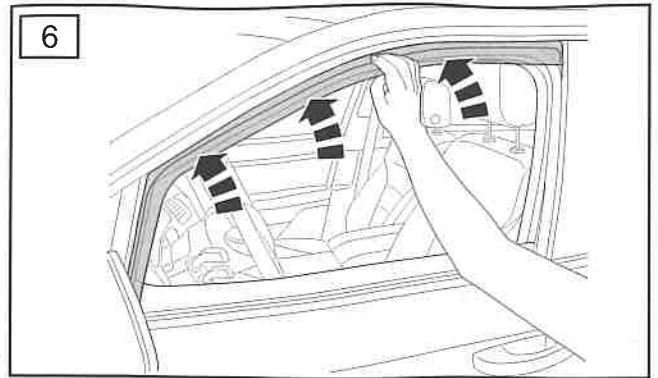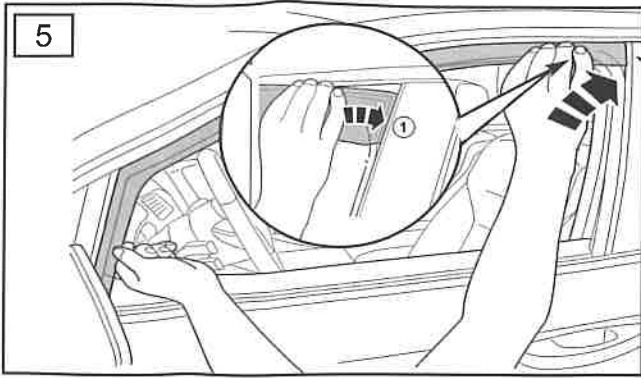

Weitere Informationen zum Einbau finden Sie unter:  
 For more information on installation, see:  
 Pour plus d'informations sur l'installation, voir:  
 Para obtener más información sobre la instalación, vea:  
 Для получения дополнительной информации по установке, см.:

[www.climair.de/einbaufilm](http://www.climair.de/einbaufilm)



Oder scannen Sie per Handy diesen QR-Code  
 Or scan this qr-code with your handy

**ClimAir**<sup>®</sup>  
*car comfort*

PLAVA Kunststoffe GmbH  
 Am Spitzacker 20-22 - 61184 Karben  
 Telefon: +49(0)6039 / 9 16 3-0  
 Fax: +49(0)6039 / 21 85  
 info@climair.de - www.climair.de