



MONTERINGSANVISNING
STÄNKSKYDD FRAM



MOUNTING DESCRIPTION
MUD FLAPS - FRONT




MONTAGEANLEITUNG
SCHMUTZFÄNGER - VORNE



Make	Model	Year	Article Code
Mercedes-Benz	X-class	2018-	4740-196




15 min

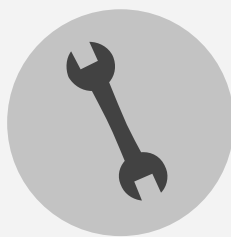

TORX

Nr	Andring	Datum	Godk.
A		2018-12-14	

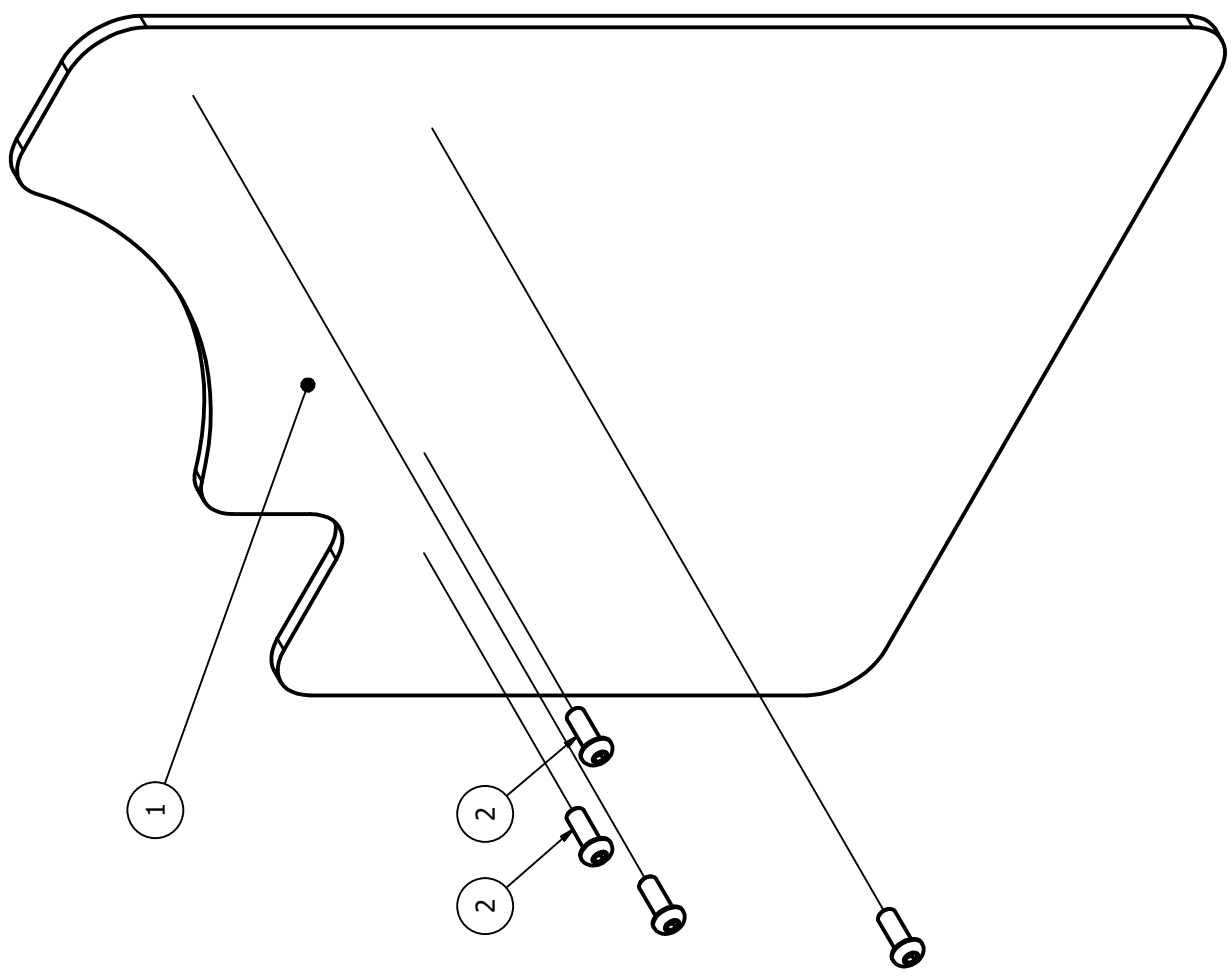

Konstruktör	Risör/av	Skala	Erstär av
MH	MH		
AB Mahol			
Tel: +46(0)520-22 14 80			
email: info@abmahol.se			
			Datum
			2018-12-14
			Art. Nr
			4740-196 Assembly

Pos	Ant	Beskrivning	Material	Dimension	Artikelnummer
2	4	PT-Skruv WN 1451	Stål		931-4234616
1	2	Stänkskydd	Gummi		8118-002



