



AUTOMOTIVE ACCESSORY
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand
PO Box 11286, Ellerslie, Auckland 1542 New Zealand
PH +64 (9) 276-9826 Fax +64 (9) 276-9836
info@airplex.co.nz www.airplex.co.nz


FITTING INSTRUCTIONS FIT944

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION


MITSUBISHI TRITON 2015+

P/N BG557

1. Clean and open bonnet.
2. Trial fit the Bonnet Guard and note the 3 pre-drilled holes in the Bonnet Guard that correspond with the holes in the underside of bonnet.
3. Remove 3 plastic fasteners.
4. Fit Bonnet Guard in position, and fasten securely with supplied screw.
Note sequence as per diagram as below.

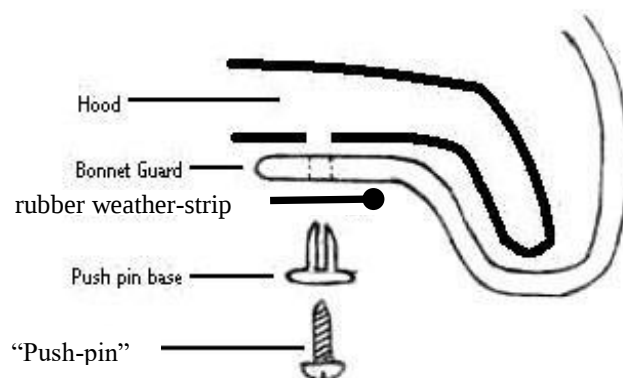

5. Apply the anti-abrasive tape on edge of bonnet where plastic fastening clip secures the Bonnet Guard near the fenders. Use the supplied alcohol prep-pads to cleanse the area first.
6. Snap the supplied plastic "W" clip into hole position on Bonnet Guard as shown, over the anti-abrasive tape.

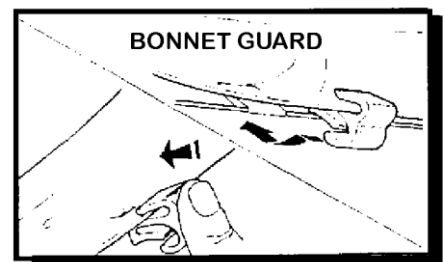

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.

**CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.
NEVER PRESS ON THE BONNET GUARD**

