

FITTING INSTRUCTIONS FIT1055


PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

NISSAN J11


P/N BG612

MADE IN NEW ZEALAND

1. Clean and open bonnet.
2. Trial fit the Bonnet Guard and note the 2 pre-drilled holes in the Bonnet Guard that correspond with the holes in the underside of bonnet.
3. Fit Bonnet Guard in position (between the rubber weather-strip and the car bonnet), and fasten securely with supplied screw.
Note sequence as per diagram as below.

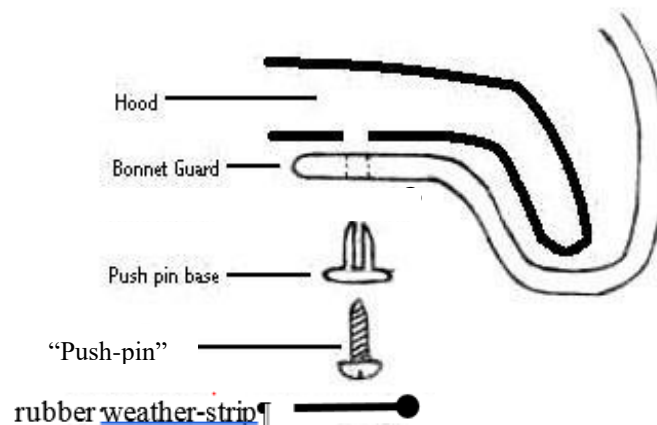

4. Apply the anti-abrasive tape on edge of hood where plastic fastening clip secures the Bonnet Guard near the fenders. Use the supplied alcohol prep-pads to cleanse the area first.
5. Snap the supplied plastic "W" clip into hole position on Bonnet Guard as shown, over the anti-abrasive tape.

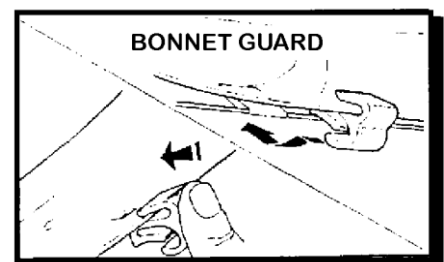

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.

MADE IN NEW ZEALAND