

## FITTING INSTRUCTIONS FIT1185



PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

# RENAULT TRAFIC 2022+

# BG645D

MADE IN NEW ZEALAND

1. Open the Bonnet and put the Bonnet Protector in place ensuring that it is centrally located. Remove the Bonnet Protector.
2. Note the 2 holes in the lower tabs of the Bonnet Protector that coincide with the 2 large holes in the underside of Bonnet.

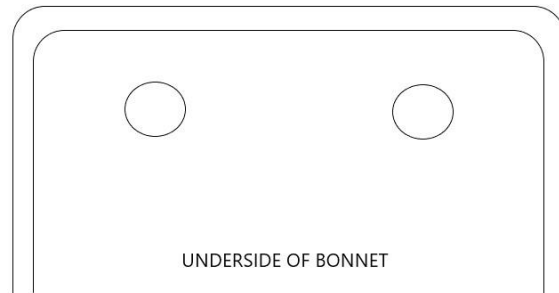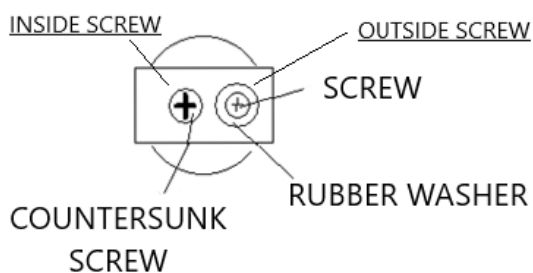

**Inside screw = counter sunk screw.**

**Outside screw = has washer.**

3. Remove the "Outside" screw and washer from each pre-assembled bracket, leaving inside screw attached to bracket pair. (i.e., "Outside" screw in diagram only to be removed).
4. Position 1 pair of brackets either side of each large steel hole on underside of Bonnet. Loosely tighten in position using the Inside screw. The brackets act as a clamp (See images below)



5. Position Bonnet Protector on Bonnet and fasten under Bonnet by inserting the removed "Outside" screw through the Bonnet Protector, also using the washer.
6. When positioned correctly, firmly tighten each of the "inside" screw.
7. Stick the anti-abrasive tape on edge of Bonnet where 2 plastic fastening clip secures the Bonnet Protector near the fenders.



AUTOMOTIVE ACCESSORY  
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD  
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand  
PO Box 11286, Ellerslie, Auckland 1542 New Zealand  
PH +64 (9) 276-9826 Fax +64 (9) 276-9836  
[info@airplex.co.nz](mailto:info@airplex.co.nz) [www.airplex.co.nz](http://www.airplex.co.nz)

8. It is the driver's responsibility to regularly check that the Bonnet Protector never touches the Bonnet. Replacement parts are readily available from the Airplex.  
The Bonnet Protector should not come into contact with the Bonnet paintwork at any time.

Bonnet adjustment: After fitment of Bug Guard, it is important to check if there is sufficient room between the Bonnet and the grille. Close Bonnet slowly to determine if room is sufficient. If doubtful, it is advisable to adjust the Bonnet stops to allow more room.

*CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.  
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.  
NEVER PRESS ON THE BONNET PROTECTOR.*

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.  
No authorisation by or association with any automobile manufacturer is implied.