

## FITTING INSTRUCTIONS FIT1049

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION


**SKODA KODIAQ 2019+**

**P/N BG598**


MADE IN NEW ZEALAND

1. Clean and open bonnet.
2. Trial fit the Bonnet Guard and note the 4 pre-drilled holes in the Bonnet Guard that correspond with the holes in the underside of bonnet.
3. Remove 4 plastic fasteners.
4. Fit Bonnet Guard in position and fasten securely with supplied plastic "push pins". Note sequence as per diagram as below.

Most Kodiaq's will have a "rubber weather-strip" attached to the underside of bonnet. If so, insert the Bonnet Guard between the bonnet and the weather-strip.

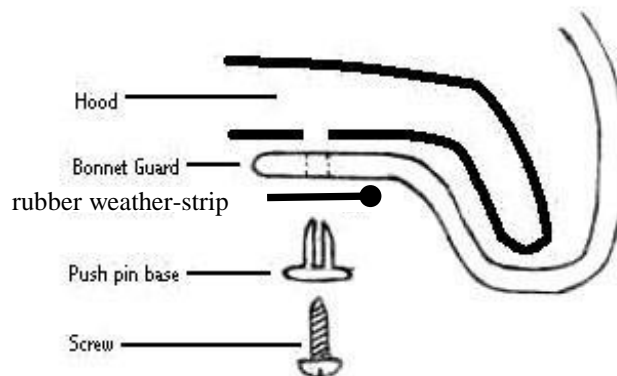

5. Apply the anti-abrasive tape on edge of bonnet where plastic fastening clip secures the Bonnet Guard near the fenders. Use the supplied alcohol prep-pads to cleanse the area first.
6. Snap 2 supplied plastic "W" clip into hole position on Bonnet Guard as shown, over the anti-abrasive tape.

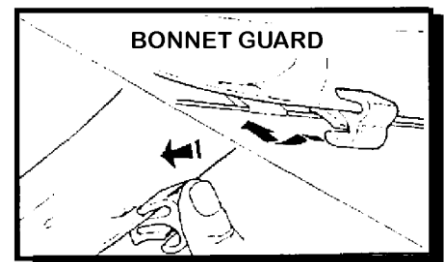

***CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.  
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.  
NEVER PRESS ON THE BONNET GUARD.***

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.  
No authorization by or association with any automobile manufacturer is implied.