

## FITTING INSTRUCTIONS FIT1285

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

### BONNET GUARD TOYOTA LANDCRUISER PRADO 250 SERIES


### BG667D

MADE IN NEW ZEALAND

1. Clean and open bonnet.
2. Test fit bonnet guard and take note where the bump-ons will go. Apply 3 flat bump-ons in 3 places **ON TOP** of bonnet approx. 3-5mm above the plastic bonnet trim.  
Use supplied alcohol wipes to clean the area first.



3. Place middle of bonnet guard **ON TOP** of the bump-ons and slide the side tabs under the bonnet.
4. Test Bonnet Guard on the bonnet and note the 4 holes underside of bonnet that correspond with 4 pre-drilled holes in Bonnet Guard.
5. Fit Bonnet Guard in position and fasten securely with supplied plastic "push pins".
6. Close the hood by dropping from 6" height. Assist closing by pressing on the hood, but never press on the hood protector

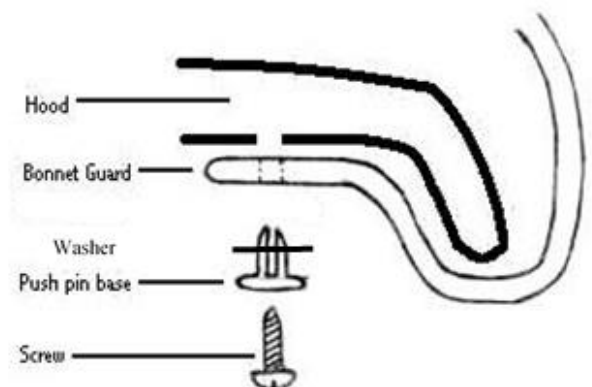

Some vehicles may have a "rubber weather-strip" attached to the underside of bonnet.  
If so, insert the bonnet guard **between** the bonnet and the weather-strip

Wash acrylic with a mild soap and lukewarm water solution, using a clean soft cloth or sponge.  
No authorization by or association with any automobile manufacturer is implied.