

## FITTING INSTRUCTIONS FIT1117


PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

# TOYOTA COROLLA CROSS


# BG632D

MADE IN NEW ZEALAND

1. Clean and open bonnet.
2. Test Bonnet Guard on the bonnet and note the 2 holes in bonnet that correspond with 2 of the 4 pre-drilled holes in Bonnet Guard.
3. Fit Bonnet Guard in position and fasten securely with supplied plastic "push pins" and washers as shown in diagram.

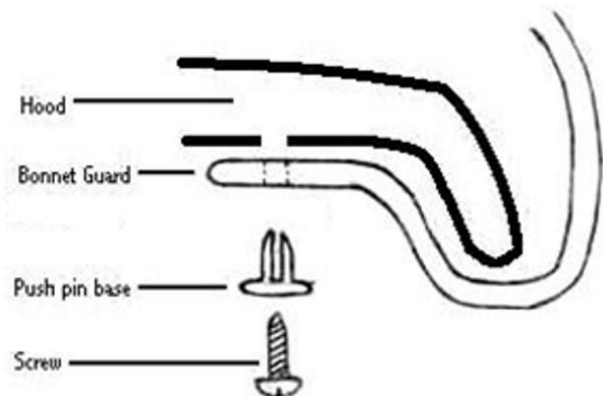

4. Fit the plastic "W" clips to the 2 holes at the outer edge of the Bonnet Guard. Apply the supplied rectangular pieces of anti-abrasive tape on edge of bonnet where plastic fastening "W" clips secure the Bonnet Guard. Use the supplied alcohol prep-pads to cleanse the area first.

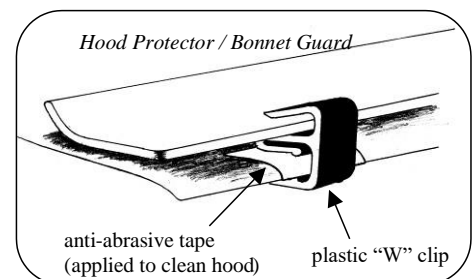

**Some vehicles will have a "rubber weather-strip" attached to the underside of bonnet. If so, insert the Bonnet Guard between the bonnet and the weather-strip**

***CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.  
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.  
NEVER PRESS ON THE BONNET GUARD.***

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.  
No authorization by or association with any automobile manufacturer is implied.