



MONTERINGSANVISNING
TAKRAILS I ALUMINIUM



MOUNTING DESCRIPTION
ROOF RAILS IN ALUMINIUM



MONTAGEANLEITUNG
DACHREILING AUS ALUMINIUM



TRANSPORT
S T Y L I N G



Make
VW


Model
Transporter T5
Transporter T6
Multivan T5

Year
2003-2010
2011-2015
2016-
2003-2010
2011-2015
2016-

Article Code
7522-930
7522-930L
7522-930LB
7522-931
7526-930
7526-930L
7526-930LB
7526-931



30 min

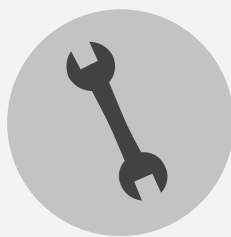

5 mm



ISO 9000:2000



EN ISO 9001:2000



Transporter T5/T6



Multivan T5/T6





Transporter T5/T6

(Ej Multivan)

x6





M60 x 60

M60 x 80

M60 x 60

x6



