



# MOUNTING INSTRUCTION



**VW AMAROK 2012-  
CENTRAL TRUNK DOOR LOCK SYSTEM  
7535BMK001**



**1**  
OPEN UPPER CAPS OF TRUNK




**2**  
OPEN CLIPS



**3**  
REMOVE LOCK SCREWS




**4**  
SET THE MECHANISM  
LIKE IN THE PICTURE

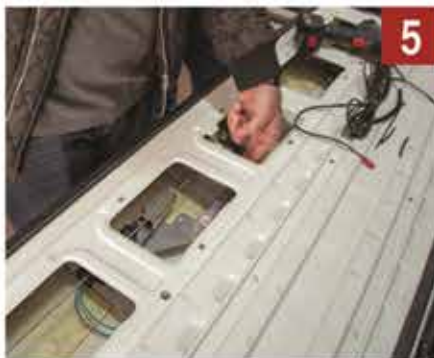

**5**  
SET THE MECHANISM  
TO THE BOTTOM CLEARANCE



**6**  
SET THE MECHANISM  
LIKE IN THE PICTURE

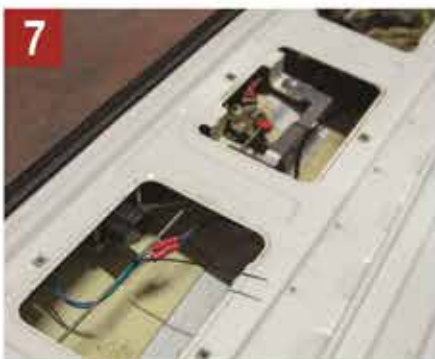

**7**  
MAKE CABLE CONNECTIONS



**8**  
COMBINE THE CABLE  
FUEL FLAP CABLE



**9**  
CLOSE THE TRUNK LOCK UPPER CAP  
AFTER CONTROLLING THE CAP LOCK  
BY YOUR REMOTE CONTROL