



AUTOMOTIVE ACCESSORY  
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD  
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand  
PO Box 11286, Ellerslie, Auckland 1542 New Zealand  
PH +64 (9) 276-9826 Fax +64 (9) 276-9836  
[info@airplex.co.nz](mailto:info@airplex.co.nz) [www.airplex.co.nz](http://www.airplex.co.nz)

## FITTING INSTRUCTIONS FIT1040

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION


# VW TIGUAN 2017+

# P/N BG597


MADE IN NEW ZEALAND

1. Clean and open bonnet.

2. Fit the Bonnet Guard in position, with the holes in the Bonnet Guard lining up with the holes in the bonnet & fasten securely with supplied plastic "push pins".

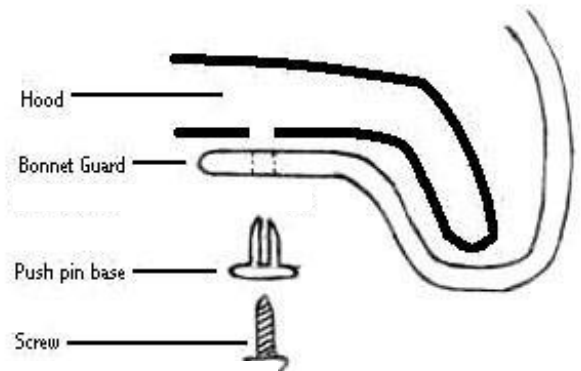

3. Fit the plastic "W" clips to the holes at the outer edge of the Bonnet Guard. Apply the supplied rectangular pieces of anti-abrasive tape on edge of bonnet where plastic fastening "W" clips secure the Bonnet Guard. Use the supplied alcohol prep-pads to cleanse the area first.

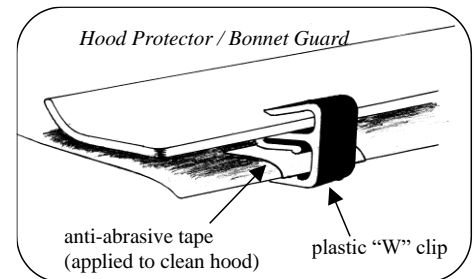

***CLOSE THE HOOD BY DROPPING FROM 6" HEIGHT.  
ASSIST CLOSURE ONLY BY PRESSING ON THE HOOD.  
NEVER PRESS ON THE HOOD PROTECTOR.***

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.  
No authorization by or association with any automobile manufacturer is implied.