


## FITTING INSTRUCTIONS FIT1003

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION


**Volkswagen Crafter 2018+**

**P/N BG589**

1. Clean and open bonnet.
2. Trial fit the Bonnet Guard and note the 4 pre-drilled holes in the Bonnet Guard that correspond with the holes in the underside of the bonnet.
3. Remove 2 plastic fasteners for both outside holes. Insert the 2x plastic grommets into 2x inside slot hole.
4. Fit Bonnet Guard in position and fasten securely with 2x big screw and washer set supplied to the inside slot holes. Fasten between the hood and rubber weather strip.
5. Note sequence as per diagram below for 2 outside hole fastening.

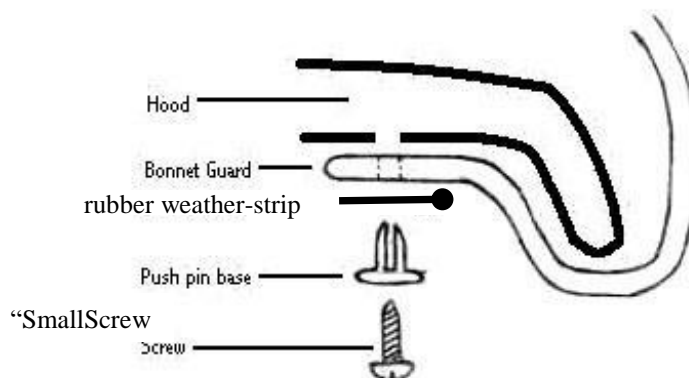

6. Apply the anti-abrasive tape on edge of bonnet where plastic fastening clip secures the Bonnet Guard near the fenders. Use the supplied alcohol prep-pads to cleanse the area first.
7. Snap the supplied plastic "W" clip into hole position on Bonnet Guard as shown, over the anti-abrasive tape.

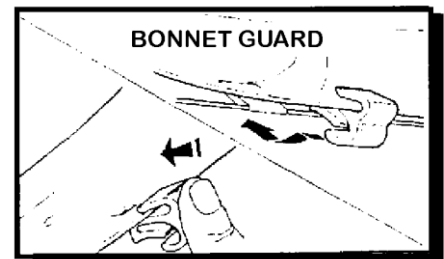

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.

**CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.  
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.  
NEVER PRESS ON THE BONNET GUARD**