
Volvo FH&FM 2008-2013

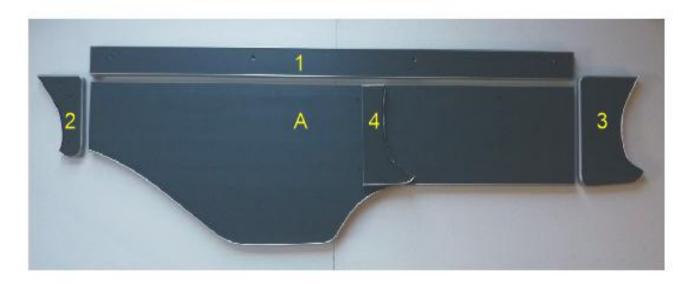

Shelf instalation:

- 1)Screw the detail 1 to the detail A;
- 2)Screw the details 2, 3 and 4 to the detail A.



Volvo shelf instalation:

1) Wash the panel with the spirit liquid;

2)Put the shelf on the panel;

3)Mark shelf sides on the panel with pencil;

4)Remove the shelf and stick up the sticky stip on the panel;

5)Put the shelf on the panel;

6)Screw the screwbolt 5x100 to the panel.





